



C213

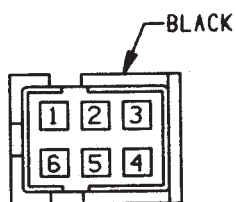


CAV	CIRCUIT
1	C91 18LB
2	F30 16RD
3	C1 14DG
3	C1 18DG
4	Z1 14BK
4	Z1 18BK
5	—
6	C21 18DB/YL

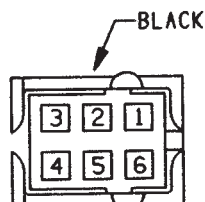


— OPTION —
AIR CONDITIONING
WIRING
IF INSTALLED
(2.5L ENGINE)

C214

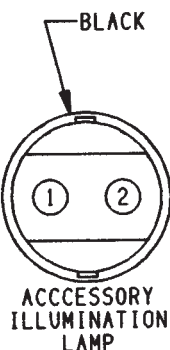


CAV	CIRCUIT	FUNCTION
1	E2 200R	PANEL LAMP DRIVER
2	Z1 18BK	GROUND

C215

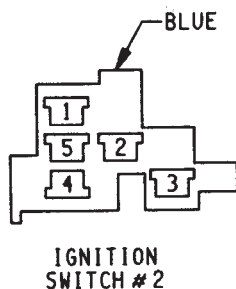


CAV	CIRCUIT	FUNCTION
1	A41 18YL	IGNITION SWITCH OUTPUT (START)
2	—	—
3	A31 14BK/WT	IGNITION SWITCH OUTPUT (ACC/RUN)
4	A21 14DB	IGNITION SWITCH OUTPUT (RUN/START)
5	—	—

C216

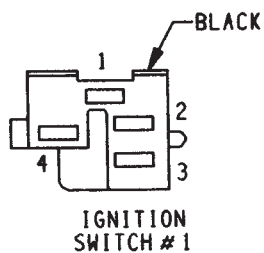

CAV	CIRCUIT	FUNCTION
1	A22 14BK/OR	IGNITION SWITCH OUTPUT (RUN)
2	G11 18WT/BK	PARK BRAKE SWITCH SENSE
2	G11 18WT/BK	PARK BRAKE SWITCH SENSE
3	—	—
4	A1 12RD	FUSED B(+)

C217

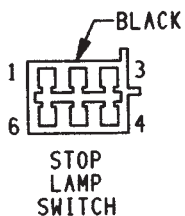

CAV	CIRCUIT	FUNCTION
1	—	—
2	L50 18WT/TN	BRAKE LAMP SWITCH OUTPUT
2	L50 18WT/TN	BRAKE LAMP SWITCH OUTPUT
3	V40 18WT/PK	BRAKE SWITCH SENSE
4	Z1 18BK	GROUND
5	F32 18PK/DB	FUSED B(+)
6	—	—