

 




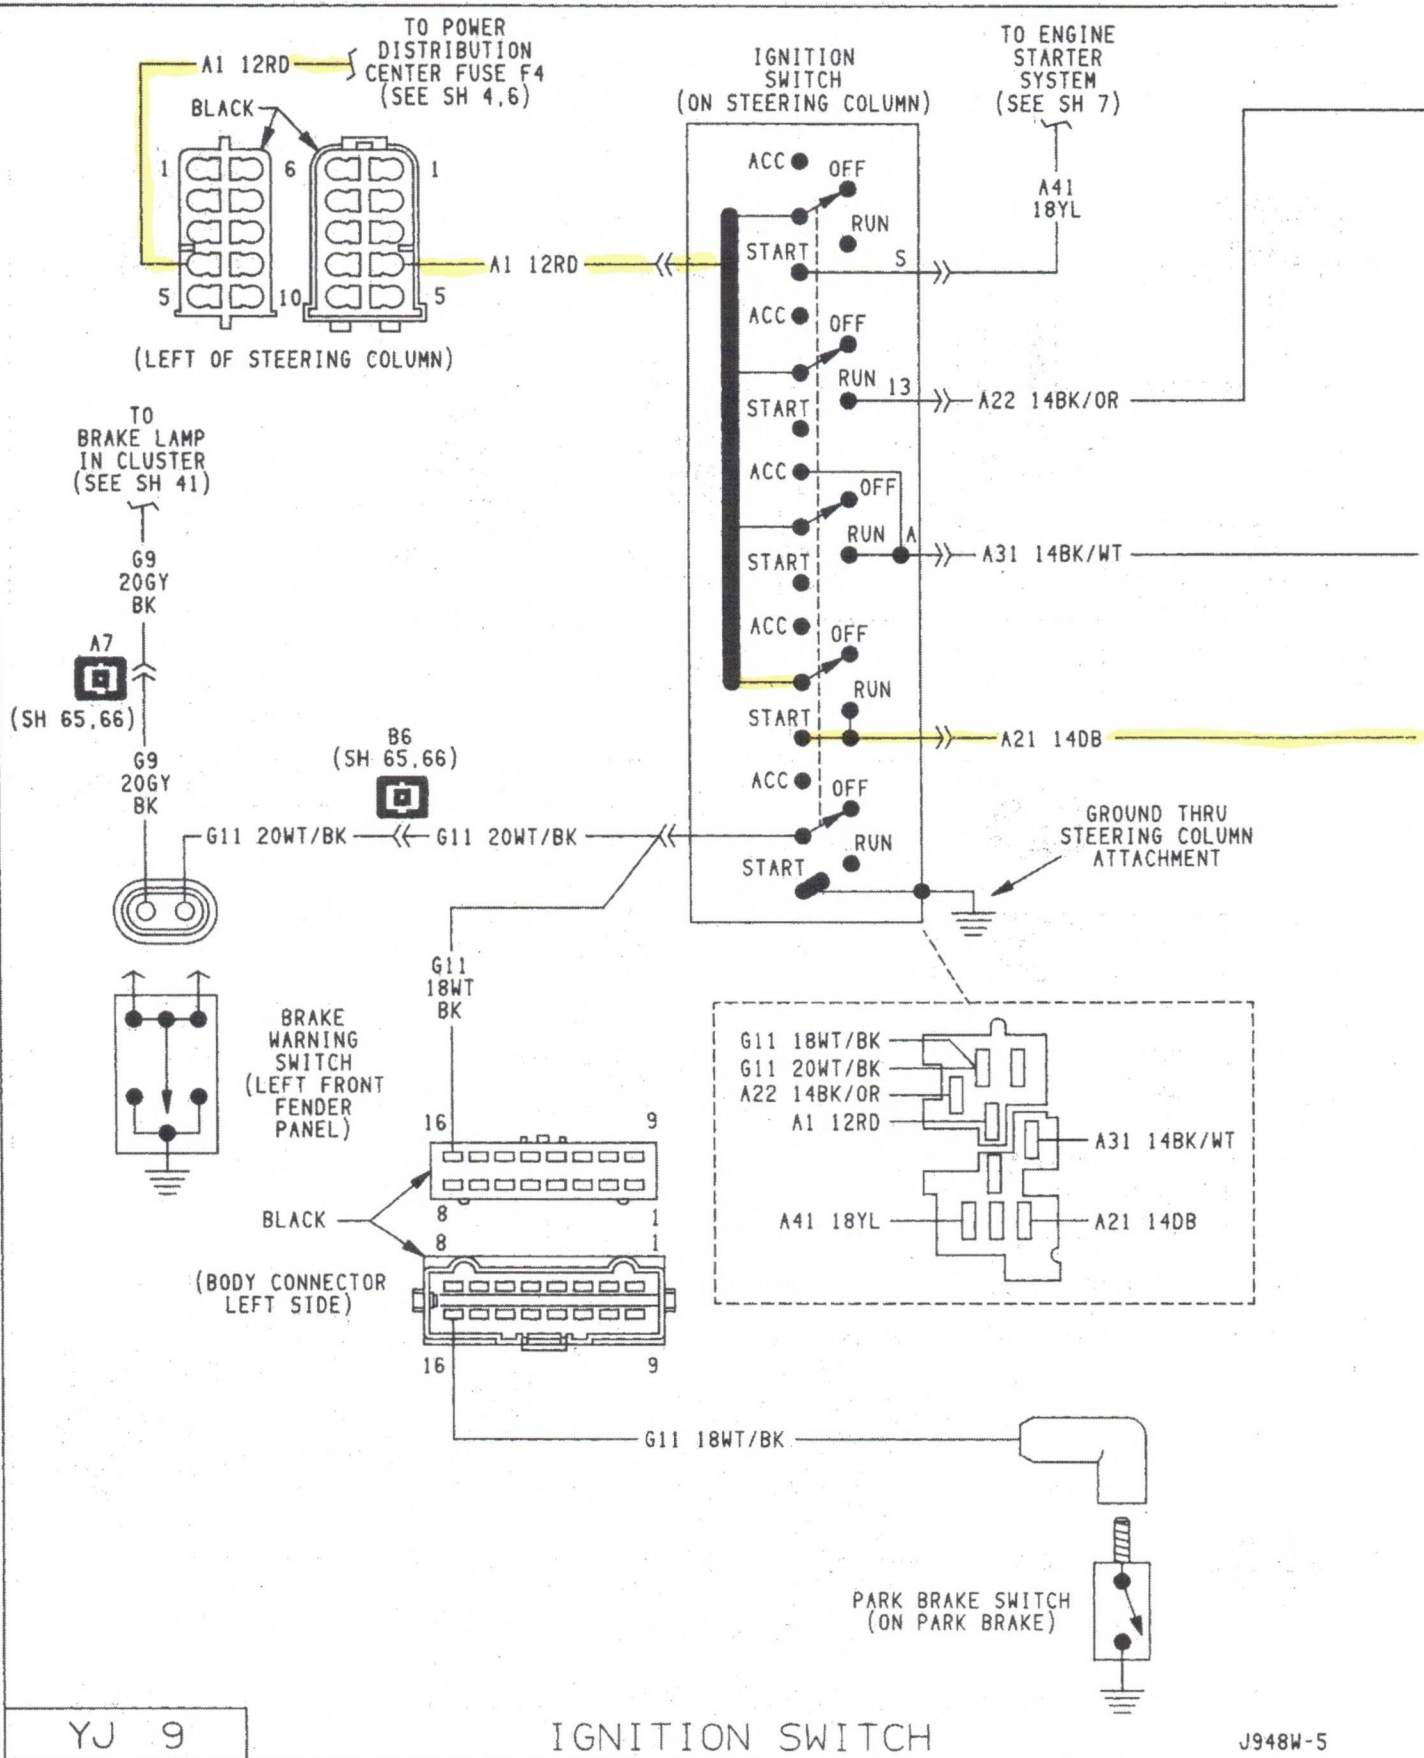

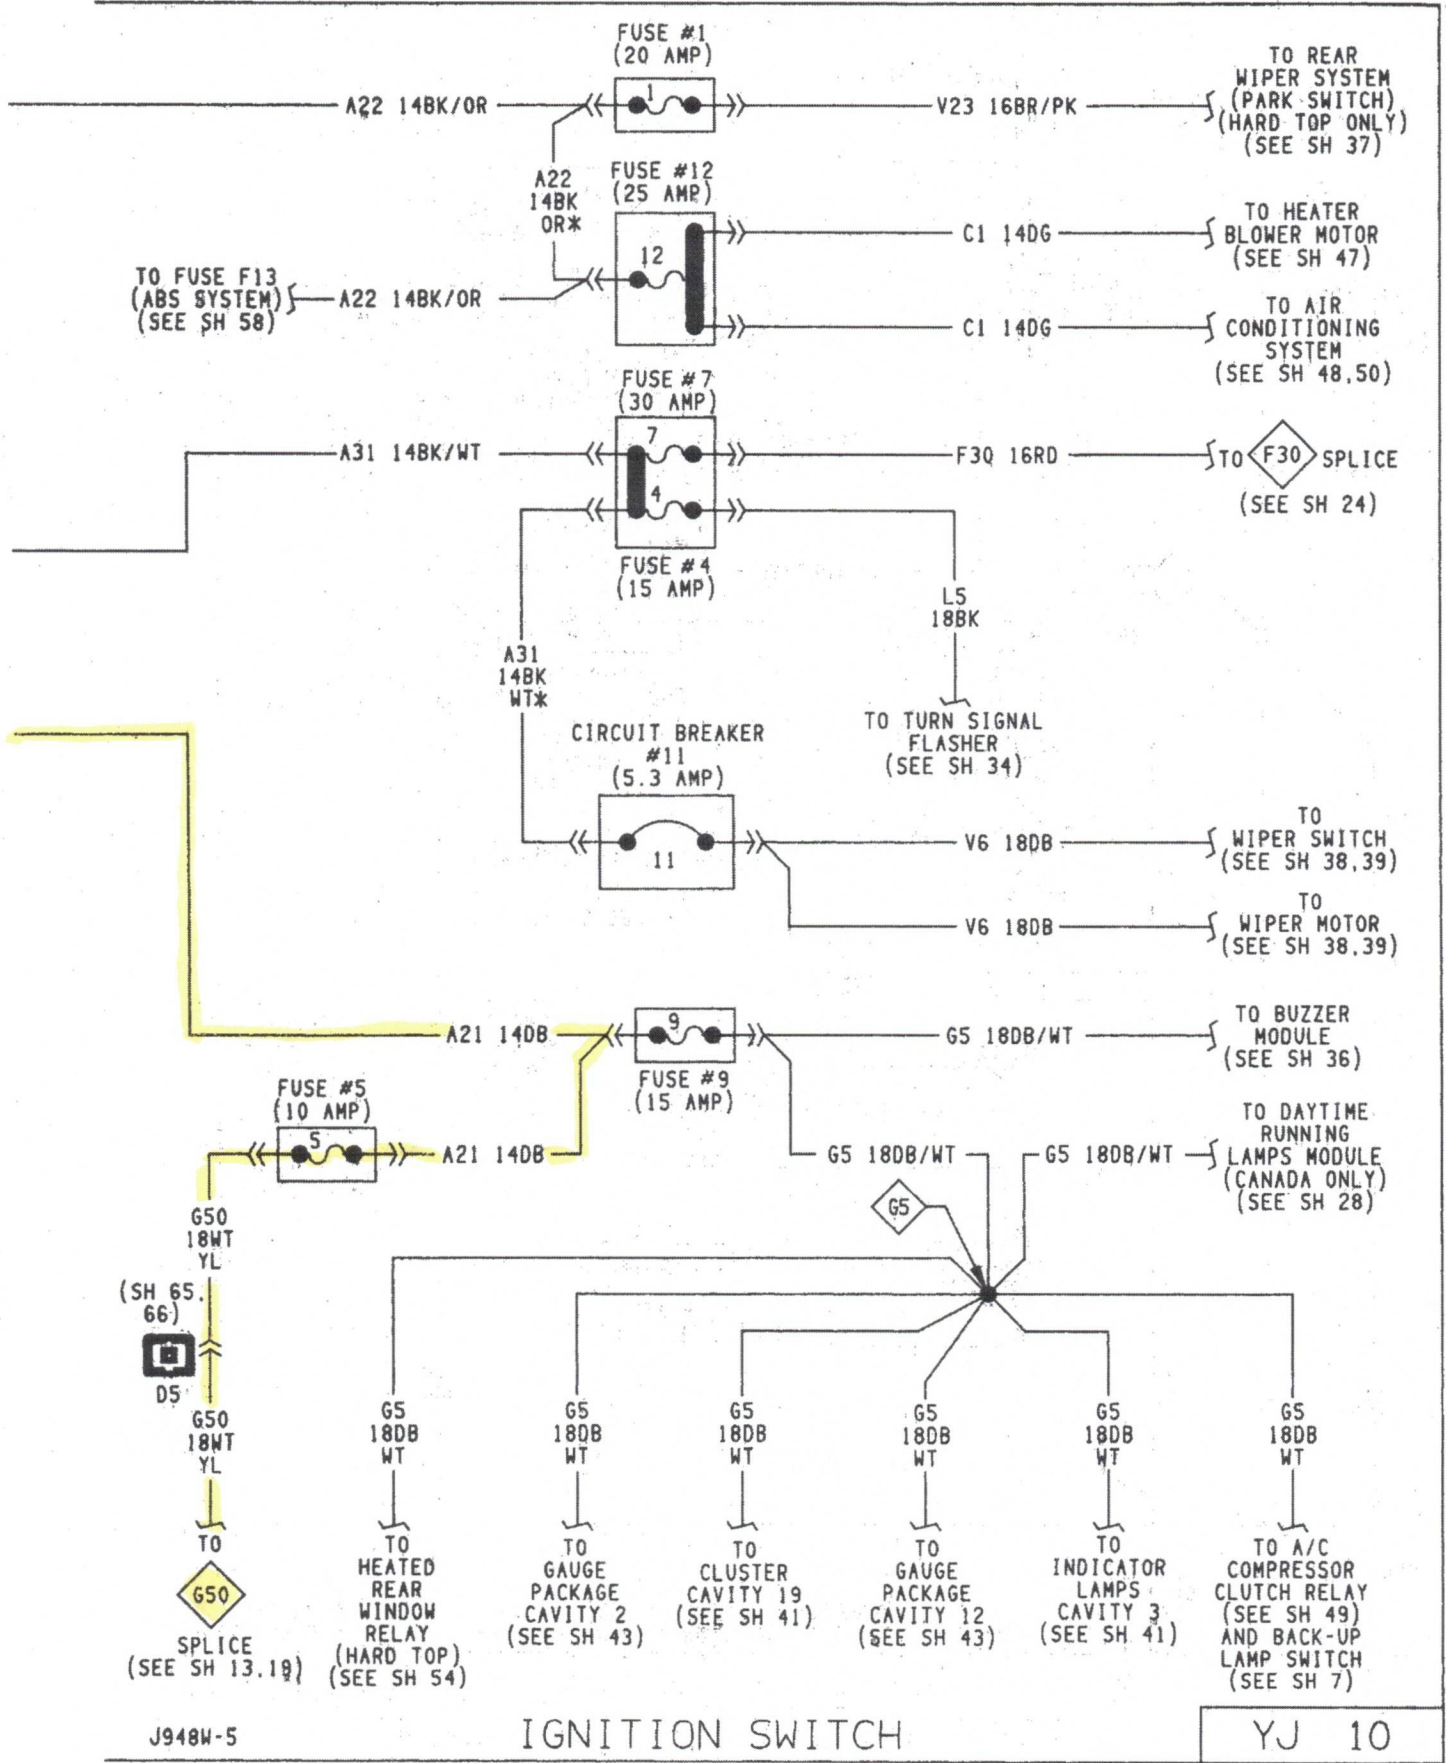



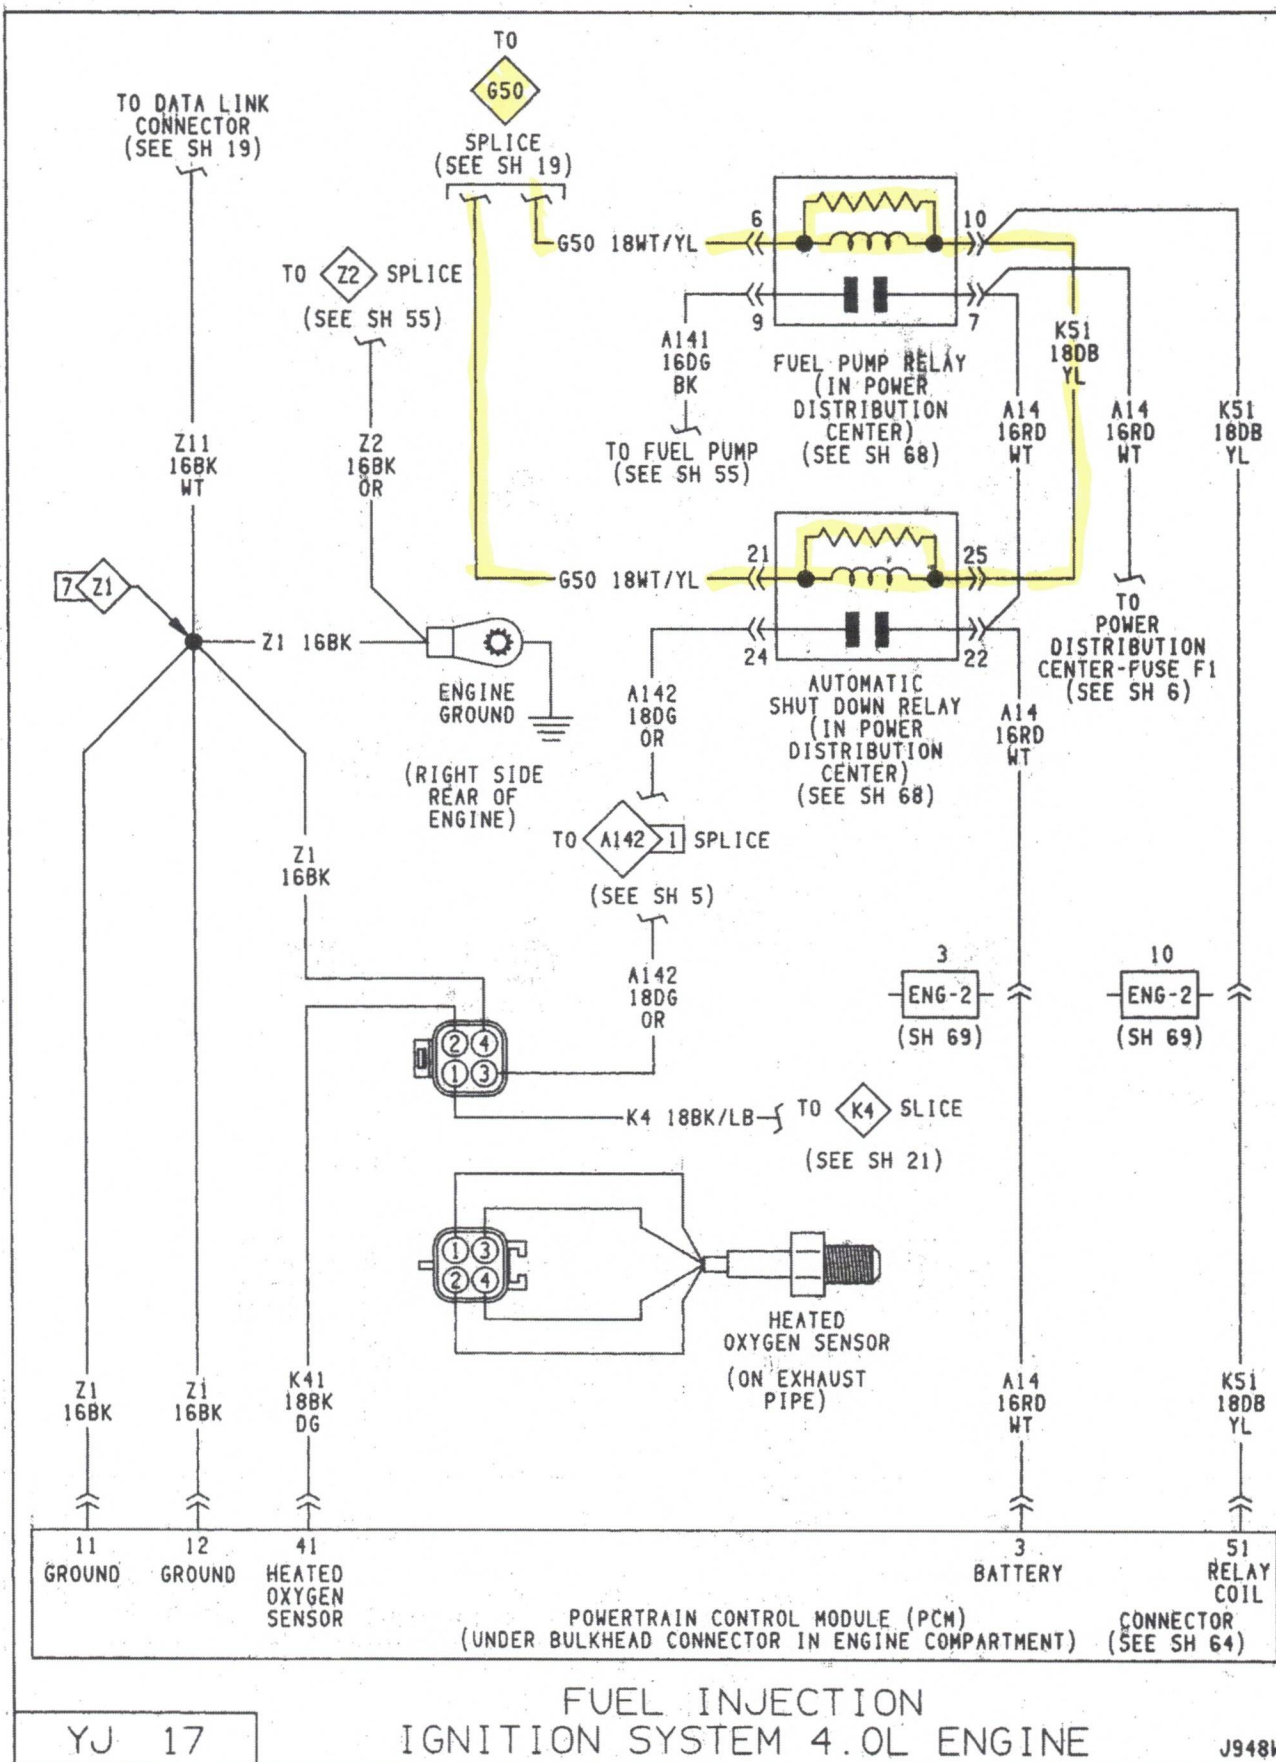

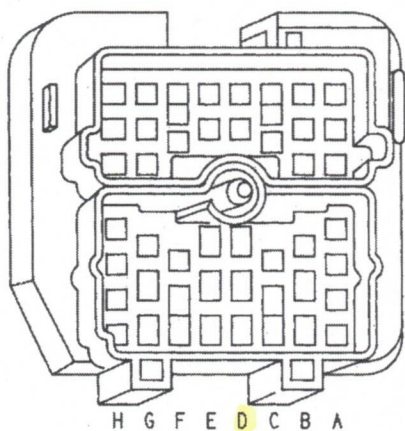


ENGINE COMPARTMENT

(2)

CAV	ENGINE COMPARTMENT CIRCUITS		SHEET
A1	L7 18BK/YL	PARKING LAMPS	26,28,30
A2	V20 18BR/WT	REAR WASHER PUMP	37
A3	L60 18TN	RIGHT TURN SIGNAL LAMPS	25,27,34
A4	G19 20LG/BR	ABS WARNING LIGHT	58
A5	A22 18BK/OR	IGNITION FEED (RUN ONLY)	58
A6	L50 18WT/TN	STOP LAMP	51,58
A7	G9 20GY/BK	BRAKE WARNING SWITCH	9
B1	L20 16LG/WT	DAYTIME RUNNING LAMPS	28,29
B2	G5 18DB/WT	DAYTIME RUNNING LAMPS	28
B3	—	—	—
B4	G7 18WT/OR	VEHICLE SPEED SIGNAL	12,18
B5	Z1 14BK	GROUND	8,31
B6	G11 20WT/BK	BRAKE BULB CHECK	9
C1	G7 18WT/OR	VEHICLE SPEED SENSOR	12,18,28
C2	LG1 18LG	LEFT TURN SIGNAL LAMPS	25,27,34
C3	—	—	—
C4	—	—	—
C5	G3 20BK/PK	MAJFUNCTION INDICATOR LAMP GROUND	16,22
C6	G5 18DB/WT	BACKUP LAMP SWITCH & A/C RELAY	7,48,49
D1	L39 16LB	FOG LAMP FEED	26,28,30
D2	—	—	—
D4	L9 18BK/WT	HAZARD FLASHER FEED	4,6
D5	G50 18WT/YL	IGNITION I-START AND RUN	10,13,19
E1	L3 16RD/OR	HIGH BEAM HEADLAMPS	25,27,29
E1	G34 18RD/GY	HIGH BEAM INDIC LP W/O DRL	25
E2	G34 18RD/GY	HIGH BEAM INDIC LP W/O DRL	26
E2	G34 18RD/GY	HIGH BEAM INDIC LP WITH DRL	28
E4	A3 12RD/OR	HEADLAMP SWITCH FEED	4,6,29
E5	—	—	—
F1	—	—	—
F2	—	—	—
F3	V10 18BR	WINDSHIELD WASHER PUMP FEED	38,39
F4	—	—	—
F5	—	—	—
F6	K54 200R/BK	UPSHIFT SWITCH AND EMCC RELAY	13,19,56
G1	—	—	—
G2	—	—	—
G3	X2 18DG/RD	HORN	33
G4	A6 12RD/BK	FUSEBLOCK FEED	4,6,30
G5	A41 18YL	STARTER RELAY-CRANK	7
G6	X2 18DG/RD	HORN RELAY	33
H1	L4 16VT/WT	LOW BEAM HEADLAMPS	25,27,29
H2	—	—	—
H3	—	—	—
H4	M1 18PK	I.O.D. BATTERY FEED	8,35
H5	V40 18WT/PK	STOP LAMP SWITCH	16,22,34
H6	G21 20GY/LB	TACHOMETER SIGNAL	16,22

CAV	INSTRUMENT PANEL CIRCUITS	
A1	L7 18BK/YL	PARKING LAMPS FEED
A2	V20 18BR/WT	REAR WASHER PUMP (HARD TOP)
A3	L60 18TN	RIGHT TURN SIGNAL LAMPS
A4	G19 20LG/OR	ABS WARNING LIGHT
A5	A22 14BK/OR	IGNITION FEED (RUN ONLY)
A6	L50 18WT/TN	STOP LAMP FEED
A7	G9 20GY/BK	BRAKE WARNING INDICATOR LAMP
B1	L20 16LG/WT	HEADLAMP DIMMER SWITCH
B2	G5 18DB/WT	SPLICE (FUSE BLOCK)
B3	—	—
(2) B4	G7 20WT/OR	VEHICLE SPEED SENSOR SIGNAL
B5	Z1 14BK	GROUND
B6	G11 20WT/BK	BRAKE WARNING SWITCH
(2) C1	G7 20WT/OR	VEHICLE SPEED SENSOR SIGNAL
C2	L61 18LG	LEFT TURN SIGNAL LAMPS
C3	—	—
C4	—	—
C5	G3 20BK/PK	MALFUNCTION INDICATOR LAMP GROUND
C6	G5 18DB/WT	BACK-UP LAMP SWITCH & A/C RELAY
D1	L39 16LB	FOG LAMPS
D2	—	—
D4	L9 18BK/WT	HAZARD FLASHER FEED
D5	G50 18WT/YL	IGNITION I-START AND RUN
E1	L3 16RD/OR	DIMMER SWITCH-HIGH BEAM
E2	G34 18RD/GY	HIGH BEAM INDICATOR LAMP
E4	A3 12RD/OR	HEADLAMP SWITCH
E5	—	—
F1	—	—
F2	—	—
F3	V10 18BR	WINDSHIELD WASHER PUMP FEED
F4	—	—
F5	—	—
F6	K54 20OR/BK	UPSHIFT INDICATOR
G1	—	—
G2	—	—
G3	X2 18DG/RD	HORN
G4	A6 12RD/BK	FUSEBLOCK FEED
G5	A41 18YL	IGNITION SWITCH-START
G6	X2 18DG/RD	HORN RELAY
H1	L4 16VT/WT	DIMMER SWITCH-LOW BEAM
H2	—	—
H3	—	—
H4	M1 18PK	I.O.D. BATTERY FEED
H5	V40 18WT/PK	STOP LAMP SWITCH
H6	G21 20GY/LB	TACHOMETER SIGNAL

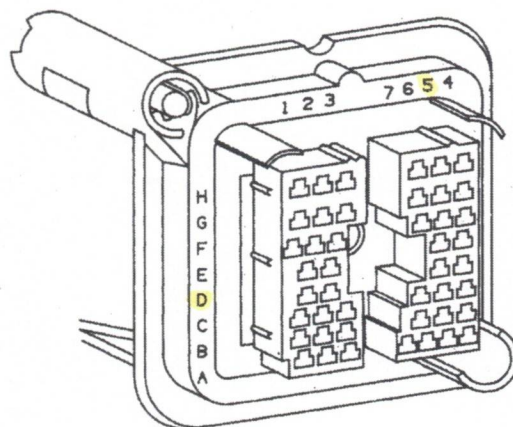

INSTRUMENT PANEL

(2) INDICATES-2 WIRES IN CAVITY